




Please read instructions carefully before installation. We recommend this product be installed by a qualified and experienced technician. If you are unsure of any of the below directions and or your ability to correctly and securely install this product, please contact us or your local dealer for help. Below diagrams show typical installation. Your vehicle may be different so please use diagrams as a guide. Make sure your vehicle is clean and free from dirt, road grime, etc. where the this product mounts. It is the riders responsibility to make sure the product is mounted and secure before each use. Loading the bag may result in a change of position, always check for proper mounting position after loading and before each and every ride.

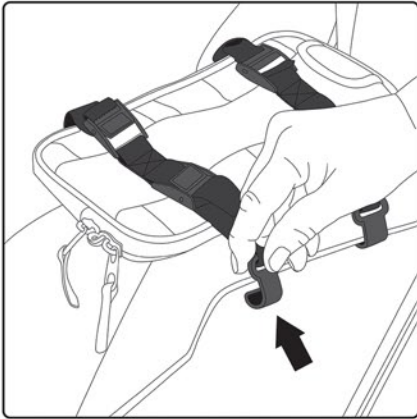


Place bag on front fender. Align so that the bag will not interfere with any moving part of the bike. Place the hooks around the edge of the fender. It might be necessary to remove some of the slack in the strap to move the hook closer to the fender.

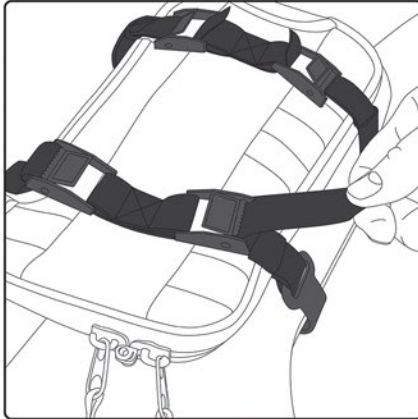


Once in position, pull the strap through the cam buckle until tight. Repeat on all 4 hooks and straps. As an alternative you can attach the bag to the fork tubes to help prevent the bag from sliding down the fender.

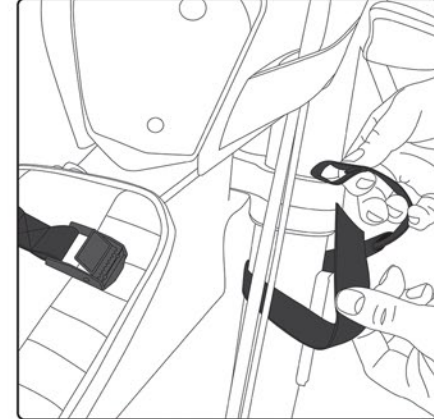

To do so, start by looping the provided straps around the fork tube and under the lower triple clamp making sure you don't pinch any cables or wires. Pass the end of the strap through the loop and pull snug.

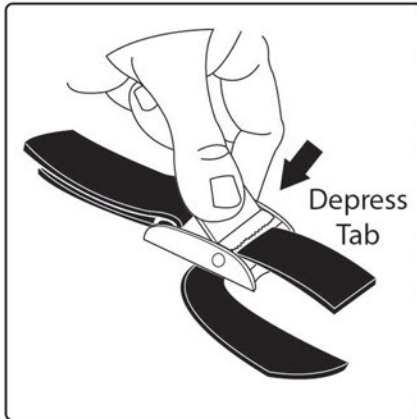

Pass the end of the strap through the cam buckle by pressing down on the aluminum tab and passing the strap through the back of the buckle and pulling tight.

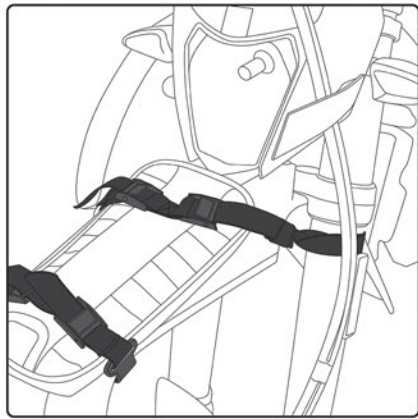

Once installed make sure that the bag is secure and free from any moving parts of the bike. Always be sure to check the bag before each ride and that all mounting points are still stable and correctly installed.



There is also a top pocket that is great for a tire iron. Always make sure when you remove contents from any of the pockets, the bag will need to be re-adjusted or tightened. This bag was designed to hold up to 1 inner tubes and 2 tire irons. Maximum carrying capacity is 5lbs.

Warning

Read the installation instructions and make yourself familiar with the process of installing the Rigg Gear product(s) on your vehicle. It is your responsibility to install the product(s) correctly and securely as outlined in these instructions. Rigg Gear products must not be overloaded or over tightened. Failure to adhere to these warnings may result in, but not limited to, the product becoming detached, becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.

Always drive safely. Always wear a helmet and protective apparel.

3518-A Lake Center Dr Santa Ana, CA 92704
Tel (714)850-1811 Fax (714)850-1848
e-mail: info@RiggGear.com www.RiggGear.com

