

# Route 1 Road Trip Saddlebags Mounting Instructions

NR-400




Please read the instructions carefully. If any part of these instructions are not clear, or not understood, please call Nelson Rigg or consult a qualified or experienced mechanic / technician. Below diagrams show typical installation, your vehicle may be different so please use diagrams as a guide. Make sure your vehicle is clean and free from dirt, road grime etc. where the this product mounts. It is the riders responsibility to make sure the product is mounted and secure before each use. Loading the bag may result in a change of position, always check for proper mounting position after loading and before each and every ride.

Before beginning installation, make sure motorcycle is on level ground. For motorcycle models with a pillion seat, remove the seat and clean the rear fender and strut mounting area. Bags are side specific so the UltraMax logo will face the rear of the motorcycle. Locate the strut bolts on either side of the motorcycle and remove one bolt at a time. After removing a bolt, depending on model, you may need to use the included washers and or spacers to provide proper clearance. See application guide on reverse side.

Take one of the brackets provided with your saddlebags and attach to your motorcycles strut. Spacers and washers may be necessary. Repeat with the remaining strut bolts one at a time. Do not over tighten, refer to your owner's manual for the correct torque specs.

Starting with one bag, zip open and place one hand behind a bracket for support and push from the inside of the saddlebag to clip into the strut bracket "C" clip firmly. Once attached, the bag can be adjusted side to side for optimal placement.

Hold the saddlebag up and feed the lower self-fastening straps through the slots in the strut brackets and pull tight making sure the strap is flush against the bottom of the bag. Repeat with the other strap then apply these steps to the opposite saddlebag.


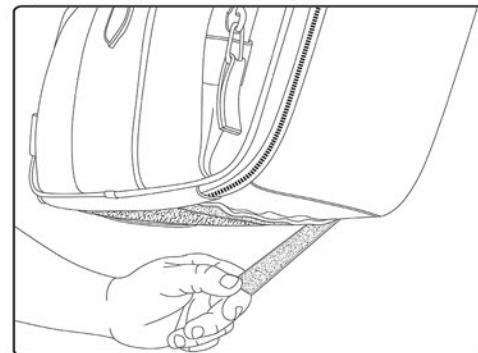
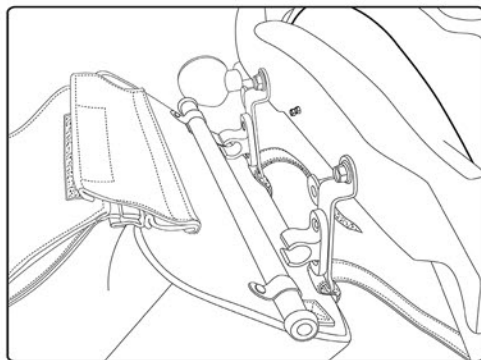
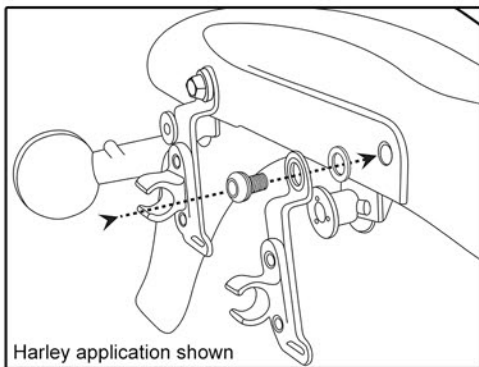


Once both saddlebags are attached, you can now adjust the self-fastening yoke to the desired width of your motorcycle fender. Reattach the seat and confirm the bags are secure.







Included rain covers are labeled "Left" and "Right" on the inside. Starting with the bottom of the rain cover, unhook the lower self-fastening strap and slide the elastic band through and reattach straps.

To install the top elastic band, detach yoke by unzipping. Slide the elastic band around the zipper and reattach yoke. Pull the barrel clasp on the top of the rain cover to secure.

Kit includes 4 Saddlebag Brackets Plus bolts, washers and spacers

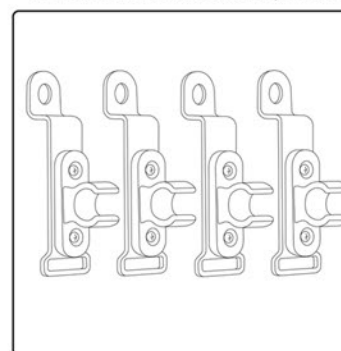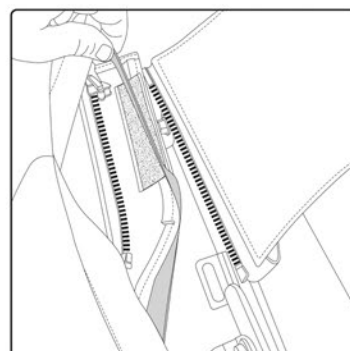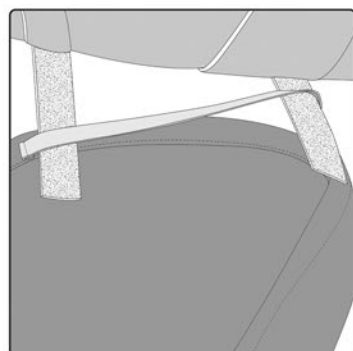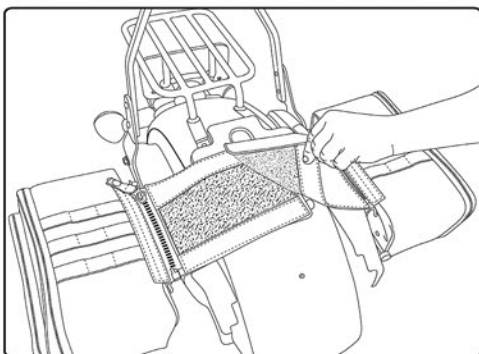


Below illustrations are to scale for reference

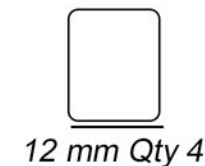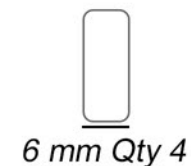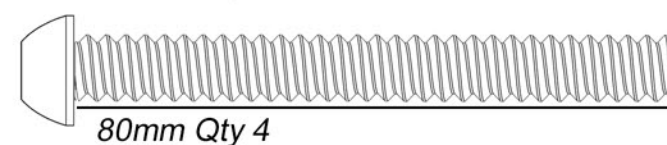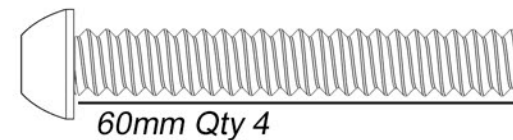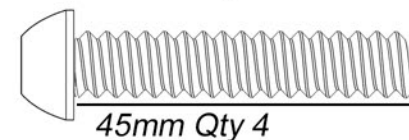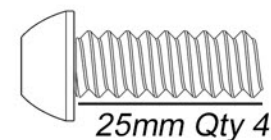

M8 16 mm Qty 4 M10 19.25 mm Qty 4

Bolt | Washer | Bracket | Spacer

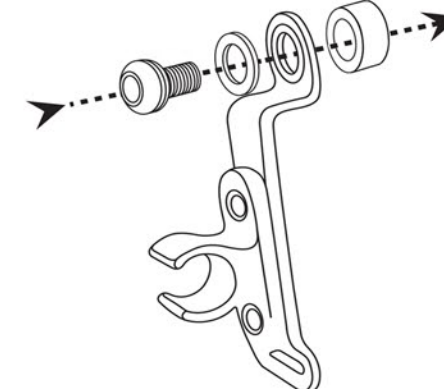

## Warning

Read the installation instructions and make yourself familiar with the process of installing the Nelson Rigg product(s) on your vehicle. It is your responsibility to install the product(s) correctly and securely as outlined in these instructions. Nelson-Rigg products must not be overloaded or over tightened. Failure to adhere to these warnings may result in, but not limited to, the product becoming detached, becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.

Always drive safely. Always wear a helmet and protective apparel.

3518 W. Lake Center Dr, Ste A, Santa Ana, CA 92704  
 (714)850-1811  
 e-mail: info@nelsonrigg.com www.nelsonrigg.com

